

*Installing your Tapisom Professionally is essential to the product's efficiency in terms of wear and durability.*

### Preparation of subfloors


- The subfloor must be flat, dry, sound, clean and absorbent.
- The levelling compound chosen must have a suitable compressive strength to suit the type of traffic and equipment being used within the area.
- It may be necessary to apply a primer, depending on the type of levelling compound chosen.
- Never apply a levelling compound to a timber substrate unless to be overlaid with Plywood etc.

### Conditions for use: precautions


- The temperatures must be above 10°C.
- When installing sheets of material within the same area, only use rolls with the same batch number and install in sequential roll order.
- For patterned material, ensure that sufficient material is allowed when cutting off lengths of sheets to ensure the pattern alignment is correct (at seam, 90° and diagonally).

### ATTENTION

*1 - Tapisom Design: in general reverse the sheet to the previous one installed.*

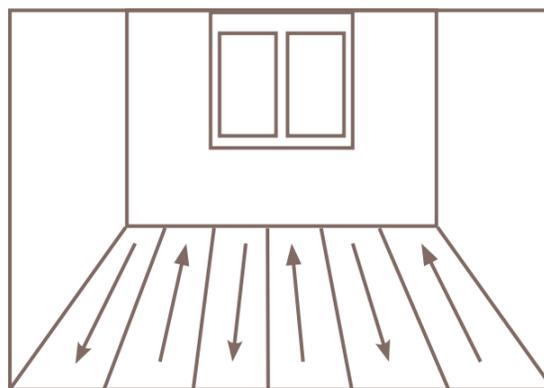

*2 - Tapisom plain: install the sheet in the same direction as the previous one installed.*

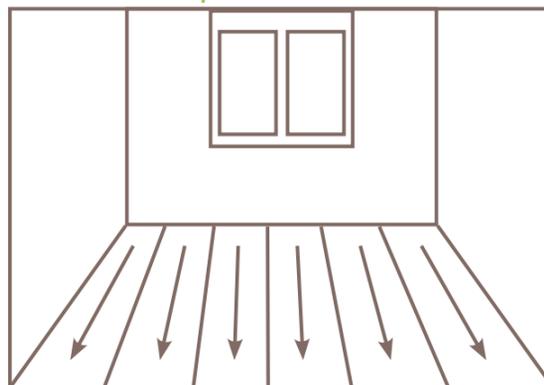

### Commence installing the sheets from the centre of the room

*A - Overlap the sheets by 3cm or by the required pattern match, if appropriate.*



N.B. Only material cut into strips which include the manufactured sheet edges are suitable for utilising for fill-in sections. This factory edge must be reversed and abutted to the previous sheet installed. Do not install strips that do not have a manufactured edge, as there is a potential risk of shading.

*B - Using a knife with a hooked blade, simultaneously cut the top sheet into the bottom sheet using a straightedge as a guide for the knife.*  
N.B. Only material cut into strips which include the manufactured sheet edges are suitable for utilising for fill-in sections. Do not use strips cut from the centre of a sheet, as there is a risk of shading.

### Adhering:

*Fold back the sheets in their length direction. Apply the acrylic adhesive using a notched trowel; apply at least 320g/m².*

- After applying the adhesive, fold back down the 1st sheet and firmly rub in with a glide or rubbing board. Fold back down the 2nd sheet whilst ensuring that the joint is close butted and firmly rub in with a glide or a rubbing board. Proceed in the same manner for all following sheets.

- Trim with a hooked blade. Proceed in the same manner for the 2nd half of all of the sheets.



**WAIT FOR 24 HOURS BEFORE REPLACING THE FURNITURE.**